

 
# HD RECEIVER

## VISIONNET GINATI

### CONTENTS

1. SAFETY .....	3
2. INTRODUCTION .....	3
3. FEATURES .....	4
4. REMOTE CONTROL .....	5
5. FRONT PANEL .....	6
6. REAR PANEL .....	6
7. CONNECTING YOUR SYSTEM .....	7
7.1 TV WITH MOTORIZED SYSTEM (DiSEqC 1.2) .....	7
8. BASIC OPERATIONS .....	8
8.1 TURN ON STB .....	8
8.2 POWER .....	8
8.3 CHANNEL UP/CHANNEL DOWN .....	8
8.4 LEFT/RIGHT .....	8
8.5 NUMBER .....	8
8.6 MUTE .....	8
8.7 PAUSE .....	8
8.8 RECALL .....	8
8.9 FAVORITE .....	8
8.10 AUDIO .....	9
8.11 INFORMATION .....	9
8.12 EPG .....	9
8.13 TV/RADIO .....	10
8.14 CHANNEL LIST .....	10
8.15 SLEEP .....	11
8.16 PAGE UP/PAGE DOWN .....	11
8.17 TEXT .....	11
8.18 SUBTITLE .....	11
8.19 FIND .....	11
8.20 ZOOM .....	12
8.21 TV/STB .....	12
8.22 MENU .....	12
8.23 VIDEO FORMAT .....	12
8.24 EXIT .....	12

9. SERVICE .....	
9.1 ORGANIZING SERVICE .....	
9.2 ORGANIZING FAVOURITES .....	
10. INSTALLATION .....	
10.1 SATELLITE INSTALLATION .....	
10.2 AUTO INSTALLATION .....	
10.3 SATELLITE GUIDE .....	
11. SYSTEM .....	
11.1 LANGUAGE .....	
11.2 A/V CONTROL .....	
11.3 TIME SETTING .....	
11.4 TIMER .....	
11.5 PARENTAL CONTROL .....	
11.6 MISCELLANEOUS SETTINGS .....	
11.7 SOFTWARE UPGRADE .....	
11.8 DEFAULT SETTING .....	
11.9 INFORMATION .....	
12. MEDIA .....	24
12.1 RECORD .....	24
12.2 MOVIE .....	24
12.3 IMAGE .....	25
12.4 PVR SETTING .....	26
12.5 DISK MANAGE .....	27
12.6 REMOVE USB DEVICE SAFELY! .....	27
13. GAME .....	28
13.1 TETRIS .....	28
13.2 SNAKE .....	28
13.3 OTHELLO .....	28
14. EPG .....	28
15. NEW FEATURES .....	29
15.1 EQUALIZER .....	29
16. TROUBLE SHOOTING .....	30
17. SPECIFICATIONS .....	31



## 1. SAFETY

This HD Receiver has been manufactured to satisfy the international safety standards. Please read the following safety precautions carefully.

**MAINS SUPPLY:** 100 - 240V AC 50/60Hz

**OVERLOADING:** Do not overload wall outlet, extension cord or adapter as this may result in fire or electric shock.

**LIQUIDS:** Keep liquids away from the HD Receiver. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**CLEANING:** Disconnect the HD Receiver from the wall outlet before cleaning. Use a light damp cloth (no solvents) to dust the HD Receiver.

**VENTILATION:** The slots on top of the HD Receiver must be left uncovered to allow proper airflow to the unit. Do not stand the HD Receiver on soft furnishings or carpets. Do not expose the HD Receiver to direct sunlight or do not place it near a heater. Do not stack electronic equipments on top of the HD Receiver.

**ATTACHMENTS:** Do not use any attachments that are not recommended as these may cause hazard or damage the HD Receiver.

**CONNECTION TO THE SATELLITE DISH LNB:** Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.

FAILURE TO DO SO CAN DAMAGE THE LNB.

**CONNECTION TO THE TV:** Disconnect the HD Receiver from the mains before connecting or disconnecting the cable from the satellite dish.  
FAILURE TO DO SO CAN DAMAGE THE TV.

**EARTHING:** The LNB cable MUST BE EARTHED to the system earth for the satellite dish.

**LOCATION:** Place the HD Receiver indoor in order not to expose to lightening, rain or sunlight.

## 2. INTRODUCTION

Thank you for purchasing the HD Receiver.

This HD Receiver is fully compliant with the international DVB standard and thus transmits digital images, sounds, information guides and teletext directly to your TV through the satellite broadcasting. Now you can comfortably see and receive digitally transmitted music, news, movie and sports satellite broadcasts in your office or at your home. You can enjoy interesting games embedded in HD Receiver. In service search section, both the automatic service search method and the manual search mode are provided. Also it supports DiSEqC 1.0, 1.2 and USALS, enabling you to move your antenna in order to focus preferred satellite. You can save up to 6000 TV and Radio services and work around with the favorite, Lock, Delete, Move and Sort functions. The menu is very modern and supports multiple languages. All functions can be carried out using the remote control and some of the functions can also be carried out using the front panel. The HD Receiver is easy to use and adaptable for future advances. Please be aware that new software may change the functions of the HD Receiver. If you have any difficulties concerning the operation of your HD Receiver, please refer to the relevant section of this manual, including the 'Troubleshooting'. This Manual will provide you with useful information on using the HD Receiver.

## 3. FEATURES

- MPEG-Fully DVB-S / DVB-S2 (H.264) HD compliant
- Multilingual menu text support
- Channel switching time less than 1 second
- Channel list editing
- Favorite channel list editing
- True-color On-Screen Display (OSD)
- Electronic Program Guide (EPG) for on screen channel information
- Subtitle supported
- Teletext supported by VBI insertion and software emulation
- Parental lock facility by channel and program event
- Program and Channel information transfer from receiver to receiver
- Exciting games embedded
- Dolby Digital Bit-Stream output via HDMI
- DiSEqC 1.0, 1.1, 1.2 and USALS
- HDMI FullHD (1080p) Video/Audio Output
- 2x USB 2.0 Host
- LED Display
- Time Shift
- Video Recording
- Recording one channel and Time Shifting another channel (optional)

## 4. Remote Control



### POWER

To switch your receiver on from standby or standby to on.

### MUTE

Used to enable or disable the audio

### NUMERIC KEYS

Used to select channels or enter programming parameters

### TV / RADIO

Receiver switches between TV and Radio mode.

### ZOOM

Press key select zoom times, from X1 to X16.

### PREVIOUS

Return to the previous menu or status.

### AUDIO

Audio channels setup, to select audio mode; Left, Right, Stereo, Mono.

### TV/STB

Receiver switches between TV and receive mode.

### INFORMATION

To display channel status or various program information of current service.

### EPG(Electronic Program Guide)

Display the Programs guide on screen when available.

### MENU

Displays the Main Menu on the screen, or return to the previous menu or status.

### EXIT

Cancel the user selection and return to the viewing mode from a menu.

### OK

To select menu option, or to updated on entry.

### <> KEY

To adjust volume level, or to move cursor left or right in the menu.

### ^,v KEY

To change channels, or to move cursor up or down in the menu.

### P+/P-

To move up the cursor to the next or previous page in the menu or channel list.

### Red Key

Has different functions per menu.

### Teletext (GREEN KEY)

Shows teletext information of the current channel supports.

### Subtitle(YELLOW KEY)

Subtitle Display.

### UHF

In case your TV is connected through RF Modulator (UHF), select output channel number between CH21 and CH69 with up and down key.

### FIND

Use to prompt find channels sort by character.

### TIMER

Press timer key you can setup up the Standby time.

### P/N

Press P/N button to switch the display mode among "AUTO", "480i", "480p", "576i", "576P", "720P\_50", "720P\_60", "1080i\_50", "1080i\_60", "1080P\_50" and "1080P\_60"

### SAT

Display satellite list.

### FAV(FAVORITE)

To set receiver to the favorite server mode, display the favorite channel.

### Archive


Press this button to enter the File Manager menu directly.

### TMS(Time Shift)

Press this button to display Time Shift info bar.


- ▶ **Play**  
To play the MP3, JPEG or recording file.
- **Stop**  
To stop MP3/JPEG player, recording file , Time Shift, or playback.
- ⏸ **PAUSE**  
Used to select the freeze function.  
Press once to freeze the screen picture.
- **Record**  
To start recording.
- ◀◀ **Fast Backward**  
To start Fast Backward function.
- ▶▶ **Fast Forward**  
To start Fast Forward function .
- ◀◀ **Slow Backward**  
To start Slow Backward function .
- ▶▶ **Slow Forward**  
To start Slow Forward function

## 5. Front panel

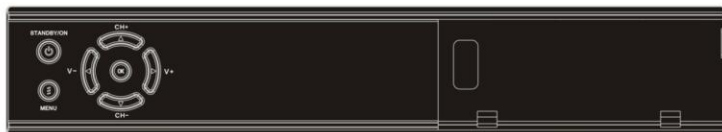

- STANDBY/ON:** To switch the receiver power on/stand by.
- MENU KEY:** To enter the Main Menu.
- OK KEY:** To see TV/Radio channel list, or to confirm in the menu.
- ▲, ▼ **KEY:** To change channels, or to move cursor up or down in the menu.
- ◀, ▶ **KEY:** To adjust volume level, or to move cursor left or right in the menu.
- Display:** (LED type) Indicates operating status of receiver.
- Signal Indicator:** When received signal is strong, the signal indicator is lit.
- POWER Indicator:** Lit whilst the receiver is powered on and at standby mode.
- Remote Sensor:** Detects infrared signal from remote control unit
- USB A:** USB 2.0 Host, connect to USB hard disk, or flash disk.

## 6. Rear Panel

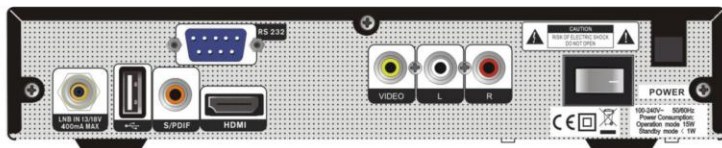


Please refer to the diagram above for all possible connections of your receiver  
Do not connect the unit to the mains socket until all other connections have been made and checked.

- LNB IN 13/18V 400mA MAX:** This port is to connect the coaxial cable from LNB of your Dish.
- USB B:** USB 2.0 Host, connect to USB hard disk, or flash disk.
- S/PDIF:** Digital Audio interface, connect to AV amplifier S/PDIF input terminal.
- RS 232 SERIAL PORT:** This is used to connect your receiver to a computer through a serial cable.
- HDMI:** Audio and Video output socket for TV set with HDMI Input Jack only.
- VIDEO OUT:** This RCA connector is used to connect any external video.
- AUDIO R/L:** These RCA connectors are used to connect any external audio amp or system.
- POWER ON/OFF SWITCH:** To switch ON/OFF the receiver power supply.

## 7. Connecting Your System

There are two ways to connect the receiver to your existing TV system. We recommend using one of the following cases for the best result:

1. If you have a high definition television set, you should use a HDMI cable for best result, Plug one end of the cable into the HDMI socket on the receiver, and the other end into the matching socket on your television. In this case, you do not have to make audio connections because the HDMI connector can output stereo audio or Dolby Digital audio.
2. Connect one end of SCART cable to the TV on the back of the receiver and the other end to SCART cable on your TV.

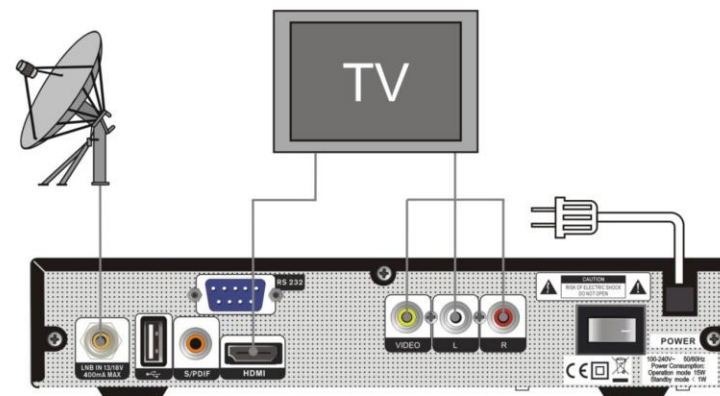

Finally connect the coaxial cable from the LNB of your Dish to the LNB IN jack on the receiver.

### With External Audio / Hi-Fi System

To connect any external Audio Hi-Fi system, the receiver has been provided with RCA connector at the back of the receiver marked with AV OUT.  
Connect an RCA cable from the AV OUT jack on the back of the receiver to the LINE, AUX, SPARE OR EXTRA input jacks on your Hi-Fi System.

### 7.1 TV with Motorized System (DiSEqC 1.2)

Connect one end of your coaxial cable to the LNB IN connector on the receiver and the other end to the REC or Receiver connector on the DiSEqC 1.2 motor.  
Connect the coaxial cable from the LNB to the LNB connector on the DiSEqC 1.2 motor.

All our receivers are designed to be DiSEqC 1.0 and DiSEqC 1.2 compatible.  
This allows multiple antennas to be connected to the receiver at the same time.  
If you have two or more fixed antennas or LNBs, then we recommend you use a DiSEqC 1.0 switch.  
Connect the coaxial cable from the first LNB to the LNB 1 or LNB A input connector of the DiSEqC switch.  
Do the same for any other LNBs that you have.  
Connect one end of a coaxial cable to the RF output connector of the DiSEqC switch,  
connect the other end to the LNB IN socket on the receiver.  
To the digital receiver, you can connect either a single satellite antenna directly or LNB of multi-feed equipment.

## 8. Basic Operations

### 8.1 Turn on STB

First, press the [Device's Main Power] to turn on the unit. When the STB is first used, there will play the first channel from the default Channel List. If the STB is not first used, STB will play the same channel as last time before turning off.

#### ? Frequently Asked Question

**Q: The power of my STB has been turned on and not in Standby mode, but the TV screen showed nothing:**

A: Make sure the TV set has been set to the correct video input (not the TV channels). For example, if you have connected the unit with the Video1 input of the TV set, the TV set has to be switched to Video1.

**Q: The power of my STB has been turn on and not in Standby mode, but the TV screen showed nothing except one box with "No Signal" image.**

A: That means the channel, which you select, is no signal. It could be several causes:

- 1 The channel which you select is not in your allocate satellite. The simply solution is to change channel.
- 2 The signal of current TV channel is too weak. You can try to change channel to other strong signal channels. If the problems still exist, please consult your local dealer or other professionals for technical service.
- 3 You use the Dual LNB, and you need Modify LNB Type

### 8.2 Power

- 1 Press [Power] Key can enter the Standby state
- 2 In Standby state, press [Power] Key again can call back the unit and go on play the previous channel
- 3 User can also disconnect the device's main power to end the Standby state.

### 8.3 Channel Up/Channel Down

In full screen, press [CH+/CH-] to change channel.

### 8.4 Left/Right-

In full screen, press [Left/Right] to adjust volume.

### 8.5 Number

In full screen, use number key and press [OK] on the Remote Control Unit to change channel.

### 8.6 Mute

- 1 Press [MUTE] key to mute the sound and the screen will show up mute OSD.
- 2 Press [MUTE] key again to restore sound.

### 8.7 Pause

- 1 In playing mode, press [Pause] key, the picture will be paused, but the sound of the channel will still continues.
- 2 Press [PLAY] key again, the screen's picture will skip over to the current playing picture, and the sound of the channel will corresponding playing.

### 8.8 Recall

Press [RETURN] key will directly switch to the previous channel that you played before current channel.

### 8.9 Favorite

- 1 In full screen, press [FAV] key, it will display a window of "Favorite list" on the left of the screen, which you can watch like below.



- 2 In the window of "Favorite list", you can move highlight by press [Channel Up/Channel Down] key to select favorite Channels.
- 3 In the window of "Favorite list", you can press [Left/Right] key to select favorite groups Pressing [P-/P+] keys can implement the "Page up/Page down" function
- 4 Press [Exit] key to exit the current window.

#### ? Frequently Asked Question

**Q: Why the screen displays "No Favorite Channel", after pressing [Favorite] key?**

A: It is because that you haven't set any channels as "favorite channel". Please refer to Favorite

### 8.10 Audio

- 1 In full screen, press [AUDIO] key can open the "Audio" window on the screen.



- 2 You can modify the audio track by press [Channel Up / Channel Down] key and modify the audio mode by press [Left/Right] key.
- 3 Mode: Left/Right/Stereo/Mono

### 8.11 Information

In full screen, press [INFO] key (press [INFO] key and [RED] key) can open information screen, in the window shows the parameters of current channel.



### 8.12 EPG

- 1 The STB has an Electronic Program Guide (EPG) to help you navigate channels through all the possible viewing options. The EPG supplies

information such as channel listings and starting and ending times for all available channels. Press [EPG] key to display EPG screen.



- 2 Press [Red] key can select the channels by different group, such as by Favorite/Satellite/Provider/CAS etc.
- 3 Press [Green] key to select different display mode among Now EPG, Next EPG, More and Schedule, like the following picture:





4 Press [Yellow] key in EPG menu can set one record timer or go to Timer List menu.



5 In EPG menu, when you select one event by highlight item, you can set this event to record timer list directly by press [REC] button.  
6 In EPG menu, press [Exit] to close EPG screen.

### 8.13 TV/RADIO

In TV mode, pressing [TV/RADIO] key can switch to Radio mode. In Radio mode, press [TV/RADIO] key to switch to TV mode.

### 8.14 Channel List

1 In full screen, press [OK] key can enter "Channel List".



2 Press [Red] key to change the different group, which you can watch like below.



3 Press [Green] key to display details information for EPG Now.



4 Press [Yellow] key you can change the current channel's property, such as FAV/ Lock/ Skip/ Delete/ Rename.



5 Press [Blue] key can open the "Sort" window like below. There are five kinds of sorting ways. You can press [Channel Up/Channel Down] key to move highlight and press [OK] key to confirm your selection.



6 The five kinds of sorting way are:  
 ✦ Default: Sorting by scanning result.  
 ✦ FTA/\$: Sort channel through free and scramble sequence. Free channel will in the front of channel list and scramble channel will at the rear of channel list  
 ✦ Lock: Accumulated all locked channels and list in the last of TV Channel List.  
 ✦ Name (A-Z): Sorting in Alphabetical Order, ignore "\$" symbol.  
 ✦ Name (Z-A): Sorting in Alphabetical Order, ignore "\$" Symbol.  
 7 Press [Up/Down] key to move highlight and press [OK] key to play the highlighted channel.  
 8 Press [Page Up/Page Down] key to page up and page Down.  
 9 Press [Exit] key to exit the channel list.

### 8.15 Sleep

1 This function can set sleep timer. When you set a sleep timer and the time arrive, the system will enter to standby automatically.  
 2 Pressing [SLEEP] key, it will switch the mode between Sleep Timer Off /10/30/60/90/120 minutes.

### 8.16 Page Up/Page Down

In Channel list, press [Page+/Page-] key can page up and page down the channel list.

### 8.17 TEXT

1 Press [green] key in full screen, you can open teletext page on the channel which has teletext information.  
 2 If the channel has no teletext information, it will show "No Teletext Data" on the screen.

### 8.18 Subtitle

Press [Yellow] key in full screen, you can switch subtitle on or off.

### 8.19 Find



1 Press [Find] key in full screen can open the "Find" window like above. You can press [Channel Up/Channel Down/Left/Right] key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.  
 2 After input each character, the program list on the left will search the channel according your input, and list the matched channel.

- 3 Move highlight to "OK" and press [OK] key can close "Find" window and you can select channel from the channels list directly.

### 8.20 Zoom

- 1 The [ZOOM] key allows you to magnify a certain area on the images
- 2 Press [ZOOM] key again, the image will enlarge rotate as x1, x2, x4, x6, x8, x12, x16.
- 3 In "x2 ~ x16" image, using [Up/ Down/ Up/ Down] keys to move the image center area you want to see.
- 4 In zoom mode, press [Exit] to close "Zoom" window.

### 8.21 TV/STB

Press [TV/STB] key can switch between TV mode and STB mode

### 8.22 Menu

Press [MENU] key can open the menu, exit the current menu to last menu or close the window.

### 8.23 Video Format

Press [P/N] (white) key under Full Screen playback for 1st, it will show the current system outputting video resolution, continuously press this key, system will switch its outputting video resolution by sequence "by source-> by native TV -> 480i-> 480P-> 576i-> 576p-> 720P-> 1080i->1080p".




### 8.24 Exit

Press [EXIT] key can exit the current menu to last menu or close the window.

## 9. Service


When you press [Menu] key to enter menu, there will display the picture like below:

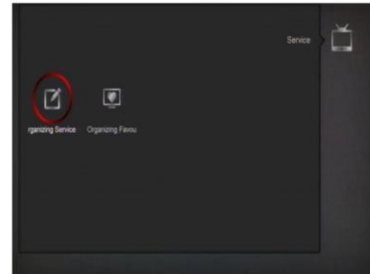

1. Press [Up/Down] key you can select the submenu of Organizing services and Organizing favourites.
2. Press [OK] key to enter the "Organizing Service". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
3. Press [Menu] key to go back to main menu.

### 9.1 Organizing Service


When you enter to "Organizing Service" menu, there will display the screen like below.

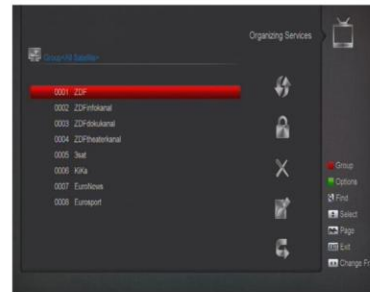

1. You can move highlight by press [Channel Up/Channel Down] key and [OK] key to select the programs which you want to edit.
2. You can press [Page Up/Page Down] key to implement the Page Up/Page Down function.


3. You can use [Red] key to switch different Group.
4. You can press [Green] key to select the programs by different select mode.
5. Press color key can implement the corresponding function in "Organizing Services".

### Groups

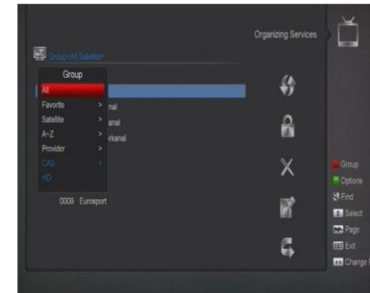

1. Press [Red] key can open the "Groups" window like above
2. You can press [Up/Down] key to move highlight and press [OK] key to select group.
3. Press [Menu] key to close "Groups" List.


### Options

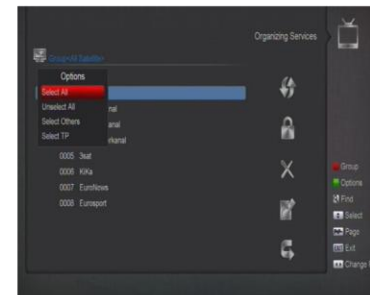

1. Press [Green] key can open the "Options" window like above.
2. You can press [Up/Down] key to move highlight and press [OK] key to confirm the select mode.
3. Press [Menu] key to close "Options" List.


### Move

1. Select the channels which you want to edit in channel list by press [OK] key or other select mode.
2. Then press [Right] key to move the high light to right toolbar.
3. Select Move icon by press [Channel Up/Channel Down] key and [OK] key.
4. Move the channels to the position which you want and press [OK] key to confirm. Like the following picture:

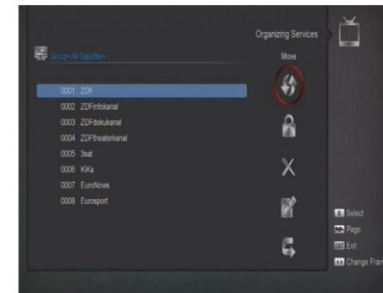

### Lock

1. Select the channels which you want to edit in channel list by press [OK] key or other select mode.
2. Then press [Right] key to move the high light to right toolbar.
3. Select Lock icon by press [Channel Up/Channel Down] key and [OK] key.
4. Lock the channel by press [OK] key. Like the following picture:

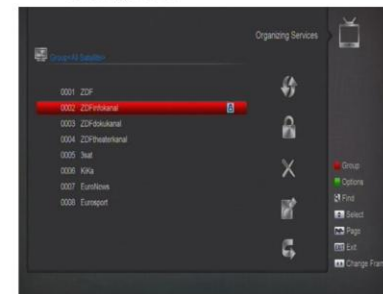


### Delete


1. Select the channels which you want to edit in channel list by press [OK] key or other select mode.
2. Then press [Right] key to move the high light to right toolbar.
3. Select Delete icon by press [Channel Up/Channel Down] key and [OK] key.
4. Delete the channel by press [OK] key.

### Skip and rename

Follow the same way you can set the channel's Skip or give the new name for high light channel.

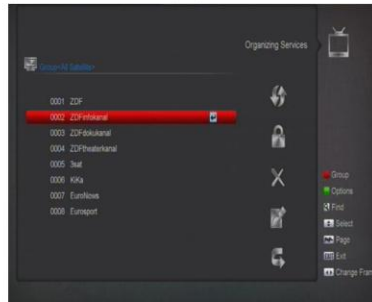

### Find

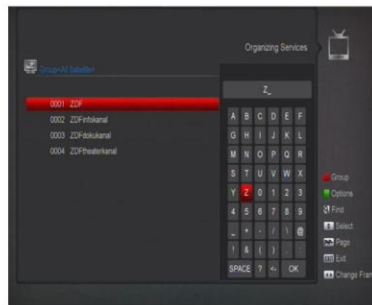


1. Press[Find] key can open the "Find" window like above. You can press[Channel Up/Channel Down/Left/Right]key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue.
2. After input each character, the program list on the left will search the channel according your input, and list the matched channel.

3. Move highlight to "OK" and press [OK] key can close "Find" window and you can select channel from the channels list directly.

## 9.2 Organizing Favourites

This menu is helpful in adding and deleting services to and from the favorite group.

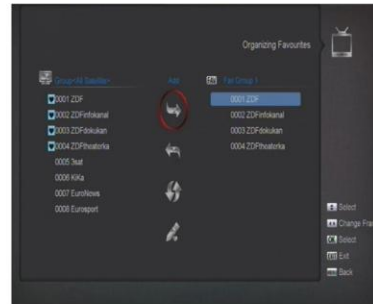

### 1 FAV List

To choose the FAV List by press "FAV" button.

### 2 Add

To add services into favorites, Mark the desired services by press "OK" button in Service List, press ► to choose Add mode and press "OK" button.

### 3 Remove

To remove services from favorites, Mark the desired services by press "OK" button in Favorite List, press ◀ to choose Remove mode and press "OK" button.

### 4 Move

You can reorder and move the service to the preferred position in Favorite List.


### 5 Rename

Select the desired FAV List by press "FAV" button, using ◀, ► buttons to choose Rename mode and press "OK" button to display keyboard, and rename it.

### 6 Group, Options and Find functions

Please refer to the "Organizing Services" part in this manual.

## 10.Installation

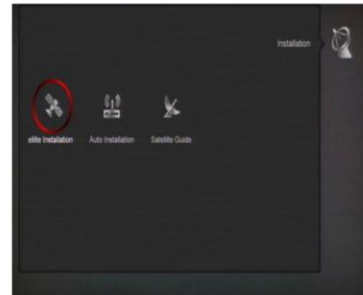

1. Press [Left/Right] key to select menu pages among Service, Installation, System, Conditional Access,Media,Application,Game and EPG.
2. Press [OK] key to enter the "Installation". If Menu Lock is "On", it will display an dialogue for user to key in password. The default Password is "0000".
3. Press [Up/ Down] key to select menu items. Press [menu] key to go back to main menu.

### 10.1 Satellite Installation

#### Satellite

1. Satellite: Press[OK]key to enter the Satellite list.



2. Press [Up/ Down] key to select satellite. Press [Page] key to page up or page down.

#### LNB Type

In this item, press[Left/Right]key can switch among "Standard", "User" and "Universal", "Unicable" mode.



#### DiSEqC

DiSEqC: You can use[Left/Right]key to switch options.

There are several options for your selection:

- a) Disable: without DiSEqC.
- b) 1/2, 2/2: two ports DiSEqC
- c) 1/4, 2/4, 3/4, 4/4: 4 ports DiSEqC
- d) 1/8, 2/8... 8/8: 8 ports DiSEqC
- e) 1/16, 2/16...16/16: 16 ports DiSEqC



#### Positioner

Positioner: In "Positioner" item, you can press[Left/Right] key to switch "Off / DiSEqC 1.2 / USALS" functions.

#### 22K

You can use [Left/Right] key to switch "ON / Off". When this item is switched to "ON", receiver will receive TV and radio input signal from 22K port. If the item is switched to "Off", the receiver will receive all signal from 0K port.

#### ! Notice

When you choose LNB type "Universal", you can not modify 22K.



1. Language: press [Left/Right] key to select menu languages, the selections of languages include: English, German, Greek, French, Italian, Russian, Spanish, Turkish, Portuguese, Arabic, Polish, Ukraine, Persian, Romanian, Hungarian, Kurdish, Bosnian, Croatian, Bulgarian, Czech, Indonesia, Slovenian, Swedish.
2. First Audio: Some channels have more than one audio language for choosing; by this function you can set the first audio for this channel. If the playing channel has the same audio as the "First Audio" you set, system will play this audio language as default. If the channel hasn't the suited audio language, then the system will compare automatically with second audio language. The selections of audio languages include: English, German, Greek, French, Italian, Russian, Spanish, Turkish, Portuguese, Arabic, Polish, Ukraine, Persian, Romanian, Hungarian, Kurdish, Bosnian, Croatian, Bulgarian, Czech, Indonesia, Slovenian, Swedish.
3. Second Audio: If the channel has no correspond audio with "First Audio" but have corresponded audio with "Second Audio", system will play the second audio language as default. If no audio language corresponds with the "Second Audio", then the default language of current channel will be played automatically. The selections of audio languages include: English, German, Greek, French, Italian, Russian, Spanish, Turkish, Portuguese, Arabic, Polish, Ukraine, Persian, Romanian, Hungarian, Kurdish, Bosnian, Croatian, Bulgarian, Czech, Indonesia, Slovenian, Swedish.

4. Audio Priority: Press [Left/Right] key to select Dolby or Language.
5. EPG: Press [Left/Right] key can select EPG language.
6. Subtitle Language: Press [Left/Right] key can select subtitle language.
7. Teletext: You can set teletext language. If the streams have this language you can see the teletext in language you set.
8. Press [Menu] key to draw back from "Language" menu.

## 11.2 AV Control

When you enter to "TV System" menu, you will see the screen like below:



1. Display Mode is for switching the system outputting video resolution. Move highlight on it and press left or right key, it will switch video resolution circularly by the sequence "AUTO", "By Native TV", "480p", "576P", "720P\_50", "720P\_60", "1080i\_50", "1080i\_60", "1080P\_50" and "1080P\_60". This effect is equal to press White Key under Full Screen and their last setting saving will be efficient for each others. By Source means system will set the video output resolution according to the program it's playing, different resolution programs switching perhaps will makes TV screen flickering. By Native TV means system will be according to the HDMI TV's max supported resolution to set its resolution, if system is not connected to a HDMI TV, it will set resolution to be default
2. Aspect Mode is for switching the screen aspect

ratio mode. Now we provide below options: 4:3 PS / 4:3 LB / 16:9/Auto. You can press [Left/Right] key to select each mode circularly. 16:9 will provide user pillar box mode it means user use 16:9 TV to display but need to see a 4:3 full display picture. System will force press wide screen picture to be narrow and there're black band on left and right site. Auto means system won't do any aspect ration translation, 16:9 picture source will be good display on a 16:9 TV but will be too narrow on a 4:3 TV, and 4:3 picture source will be too wide in a 16:9 TV but will be good display in a 4:3 TV.

3. Video Output: Press [Left/Right] to select RGB or CVBS
4. Digital Audio Out is for setting the both SPDIF and HDMI's digital audio output mode, it has options LPCM Out, Auto. You can press [Left/Right] Key to select each mode circularly. LPCM Out means system will decode no matter AC3 or PCM audio track data to be LPCM, digital audio decoder or HDMI TV will get LPCM digital audio data. Auto means system will detect which the connected HDMI TV can decode and then output that data. If HDMI TV can decode AC3, system just output RAW data, if HDMI TV can decode LPCM only, system will just decode AC3 or LPCM to be LPCM and then output.
5. OSD Transparency: Besides the setting of "OSD Menu Style", you also can set the transparency of OSD. You can press [Left/Right] key to select the values. There are 5 levels of transparency, 10%, 20%, 30%, and 40% and "NO" (means no transparency function).
6. Brightness/Contrast/ Saturation : You can adjust the parameter about the Video image by using the [OK] button or press [Left/Right] key, the default value is Level 10..
7. Press [exit] key to draw back from "TV System" menu.

## 11.3 Time Setting

When you enter to "Local Time Setting" menu, you will see the screen like below:



1. GMT Usage: This item is use for open the usage of GMT. You can press [Left/Right] keys to switch "On/Off".
2. The "GMT Offset" item is valid only when the setting of "GMT Usage" is "Yes". You can press [Left/Right] keys to switch "GMT Offset" value, and the range is "-12:00 ~ +12:00", increase each half hour progressively.
3. You can press [Left/Right] to control Summer time on or off.
4. "Date" and "Time" items are valid only when the setting of "GMT Usage" is "No". You can press [Left/Right] keys to moving highlight and use number keys to input directly.
5. Time Display: This menu is for the panel display mode, if you select Off, it will display the channel NO., and if you select On, the will display the current time..  
*If the current channel provides the correct time information, you will see the current time while you enter "Time" menu. If the channel doesn't provide time information, you have to input the date and time information manually.*
6. Press [menu] key to draw back from "Local Time Setting" Menu.


## 11.4 Timer

You can press [enter] key to open timer menu.


- ❖ Current time information will display on the first column; if the current time is incorrect, please modify the time information in "Time" item.
- ❖ Timer Number: You can press [Left/Right] keys to set Timer number, and there are 8 timers in total.



- ✦ **Timer Mode:** There are several modes for Timer to setting, include Off, Once, Daily, Weekly, Monthly and Yearly.
- ✦ **Timer Service:** There are two options for "Timer Service", include "TV Channel" and "Radio Channel" (timer setting for channel change and Wakeup/Sleep) and "Record Radio" and "Record TV" (Timer setting for Record the TV or Radio program to USB Hard Disk) and Message (reminding message).
- ✦ When you select "Channel" (timer setting for channel change and Wakeup/Sleep) option in "Timer Service", the screen will display like below:

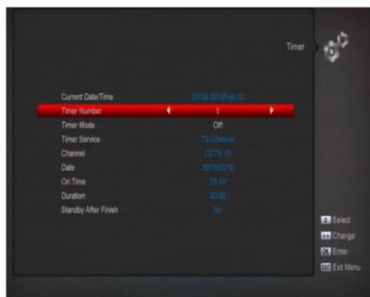

- i. Channel: press [OK] key to enter channel list and select channel that you want to setting.
  - ii. Date: use number keys to input your wakeup date.
  - iii. On Time: use number keys to input your wakeup time. Once the time's up, no matter what the system is in standby mode or in playing mode, the system will automatically switch to the channel you want and start to play.
  - iv. Duration: After you set a time for "Duration" item, once the time's up, the system will automatically switch to standby mode. If you want not work this function, set the duration is 00:00.
- ✦ When you select "Message" (reminding message) option in "Timer Service", the screen will display like below:

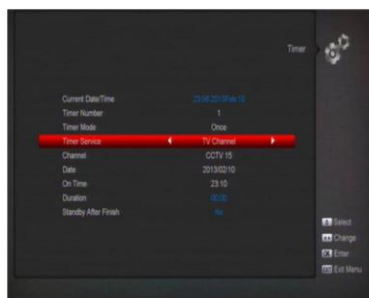

- v. Wakeup Message: press [Left/Right] key to select reminding message as Birthday, Anniversary and General.
- vi. Date, you can use number key to input your wakeup date.
- vii. On Time: use number keys to input your wakeup time. Once the time's up, no matter what the system is in standby mode or in playing mode, the system will automatically pop a reminding message.
- viii. The message will always display on the screen, you can press [Exit] key to close it.
- ix. Press [exit] key to exit the current menu.

## 11.5 Parental Control

You can set a password for anyone who wishes to operate in the "Installation" menu. And you can also set the password for the lock channels. (How to set the lock channel please refer to LOCK) Here will show you how to setting and how to revising the password.

1. In "Parental Lock" function, press [OK] key, there will pop an dialogue for you to input the password. When you input the correct password, you will see a screen like below:



2. Menu Lock determining that when user wish to enter "Installation" menu, whether have to input Password or not. If the setting of "Menu Lock" is "On" which means user have to key in password, set "Off" means unlock.
3. Channel Lock determining that when user wish to play the lock channels, whether have to input the password or not. If the setting is "On", play the channels with lock mark will show up a dialogue on the screen and ask for the password. If the setting of "Channel Lock" is "Off", the Lock function will invalid.
4. New Password is used for revising password; you can input the new password in this item by using number keys directly. After you filled in 4 digital numbers, the highlight will auto skip to Confirm Password and ask you to input the new password again. If the password is correct, the screen will show up a message of "Saving Data, Please Wait...". After finish saving and draw back to "System Setup" menu, the revising is complete.
5. Press [exit] key to draw back from the "Parental Lock" menu.

## 11.6 Miscellaneous Settings

When you enter to "Miscellaneous Settings" menu, you will see a screen like below




1. Channel list num: This item provides below options: 1/2/3, you can press [left/ right] key to select each mode circularly.
2. Subtitle Auto: You can press [Left/Right] key to select "On" or "Off". If the current channel has subtitle information, it will be showed up automatically while this function is "ON", if this function is "OFF", you need turn on the subtitle manually by press [Yellow] key.
3. Auto Power Down: You can press [Volume Up/ Volume Down] key to select the time or "Off", if you select time, duration this time if no any operation on receiver, it will go to standby mode.
4. OSD Timeout: When you switch channels in full screen, there will show up some information about current channel on the lower of the screen. And regarding to the duration of these information show up on the screen, you can press [OK] and [up/ down] key to set the time. The range of the duration is "1 second ~ 10 seconds".
5. Position: control display position of the info bar in full screen mode. You can choose "bottom" or "top".
6. Debug: you can set debug On/Off with this menu.
7. Press [menu] key to draw back from the "Miscellaneous Settings" menu.

## 11.7 Software Upgrade




### 11.7.1 Upgrade By USB

In this menu you can upgrade the software from USB conveniently, Press "Left/Right" button select USB A or USB B; press 'OK' button to enter.

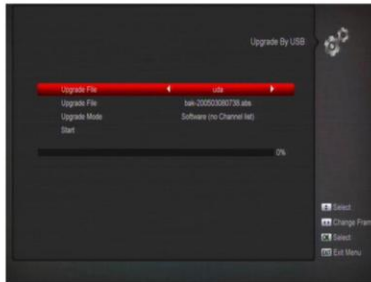

In this menu you can select the Upgrade Mode among Software(No channel list), Channel list, All SW+bootloader and All SW+Channel list, and you can select the appropriate upgrade file on "Upgrade File" item. After you select the "Upgrade Mode" and "Upgrade File", press 'OK' button on "Start" item, the receiver can upgrade automatically.

### 11.7.2 Upgrade by RS232:

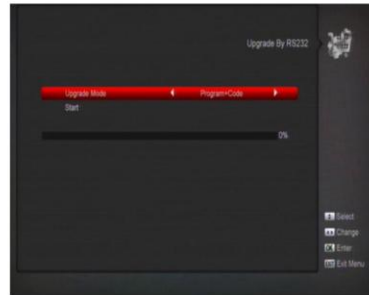

1. We offer the functions for user to connecting receiver (Master) to the other receiver (Slave) via serial interface. Connect master receiver to slave receiver via serial interface. Enter "Software Upgrade" menu in master receiver and press [Left/Right] keys to switch upgrade mode: All SW+bootloader /All SW+Channel list/Software(no channel list)/Channel list.
2. Moving highlight to "Start" on master receiver and press [OK] key to start upgrade.
3. Turn on slave receiver and it needn't operate any setting.
4. Press [Exit] key to draw back.

### 11.7.3 Backup to USB



In this menu ,you can dump the software to the USB equipment

1. In "Backup file",you can press [OK] key to edit the file name.; Press "Left/Right" button select USB A or USB B;

2. In "Mode", you can press [left/right] key to select "All" or " channel list" mode backup to USB
3. In "Backup to USB", you can press [OK] to start backup software .


### 11.7.4 Upgrade By Satellite:




This function can upgrade the software through signal lines from the satellite

1. Select the satellite and TP or input the TP value and download PID, these parameters you can get from your provider.
2. Then move the highlight to the start button and press [OK] button to start upgrade.

## 11.8 Default Setting

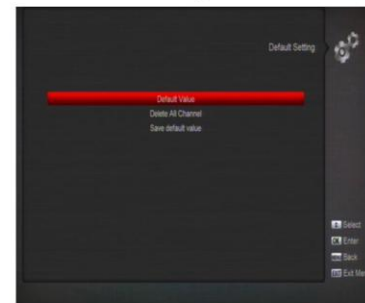


### 11.8.1 Default Value:

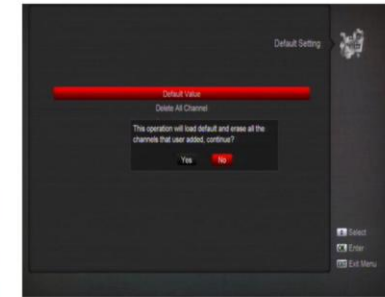

When you press [OK] key In the "Default Setting" item:

1. There will pop a dialogue for you to enter the password, and the default password is "0000".
2. After you input the correct password, there will show a warning message to inquiry you "The operation will load default and erase all the channels that user added, continue?".
3. If you select "OK" option, the all revised parameters of the receiver will reset to default value. Please carefully to using this function.
4. In step 1 and step 2, press [Exit] key can draw back from this item and without saving.

### 11.8.2 Delete All Channel:

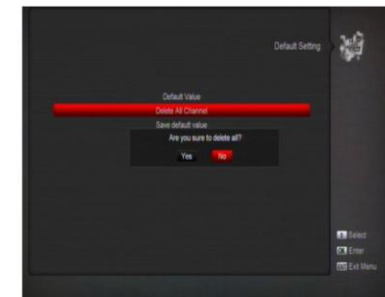

When you press [OK] key in the "Delete All Channel" item, it will pop a dialogue ask you whether confirm to delete all channel. If you select "OK", all the channel will be deleted.

### 11.8.3 Save default value



When you press [OK] key in the "Save default value" item, there will show a message to inquire you "Do you want to set current database as default data?". If you want to set current database as default data? ". If you select "OK" option, it will set current data as default data.

### 11.9 Information




1. When you enter to "Information" menu, you will see a screen like above. The screen displays :MODEL ID,SW VERSION,HW VERSION,LOADER VERSION,LATEST UPDATE,STB SN,STB ID,CHIP ID.
2. Press [Exit] key to draw back to "Tools" menu.

### 12. Media

If you enter to the "USB" Menu, you will see the picture like the below:

**Note:**

If no USB Hard Disk is inserted into the receiver, this menu is not available.

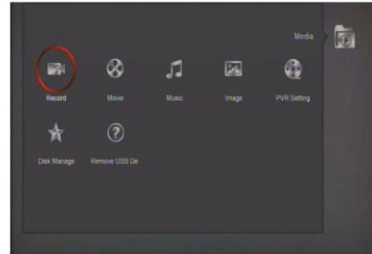


### 12.1 Record

In this menu, you can playback record files, and you can press [Red] key to rename the file, or press [Green] key to lock the file, or press [Yellow] key to delete the file. You can press [1] key to adjust the volume while you preview the record file on top of the right corner, and you can press [Mute] to enable or disable the audio.



### 12.2 Movie

In this menu, you can press [left/right] button to select the USB disk that you want to visit. Then Press [ok] button to enter the Video list.

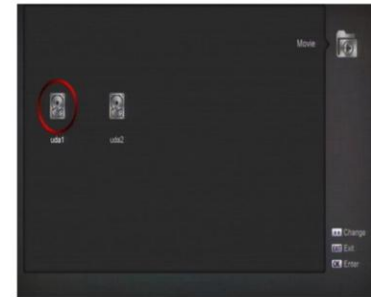

You can see the video files in this menu; it can support .mpeg and .ts format files. Press [play] key, you can preview the video at the top right corner. If you want to watch the video in full screen, you can press [OK] button.


You can press [1] key to adjust the volume while you preview the video file, press [0] key to sort the file list, and press [Mute] to enable or disable the audio.

#### ● Yellow key

To edit files or folders, including rename, copy, delete, and create folder functions. You can press [Exit] key to previous menu.

### 12.3 Image

In this menu, you can press [left/right] button to select the USB disk that you want to visit. Then Press [ok] button to enter the Image list.

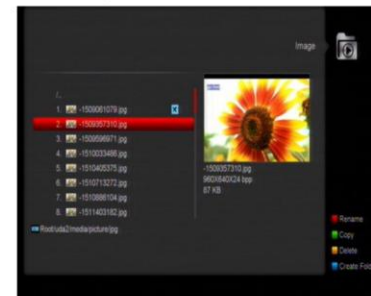

Press [OK] button on the selected files to play the files.




You can preview the picture at the top right corner if the scroll bar is on the picture files (JPG, BMP).

Move scroll bar when press up/down key, page up or down by page key.

Go into sub-directory when press ok key in the file directory, play the selected file when scroll bar is on the file, automatic return USB menu after play is over.

#### White key:

In this menu, setting JPEG player.

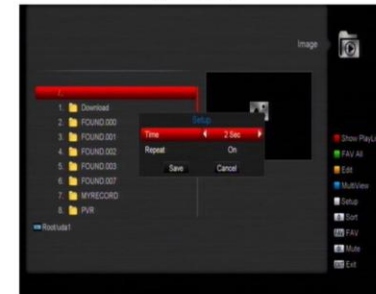

#### [0] Key:

To sort the file list by press [0] button.

#### [Red] Key:


Show file play list. There will display "The type of playlist do not exist" if there are no any file.

#### Image view operation

Please see the below image operation menu if Image function is selected.



- **Red Key:**  
Move the selected file by press Red key and [UP][DOWN] key..
  - **Green Key:**  
Delete the selected file by press Green key.
  - **Yellow Key:**  
Press Yellow Key, will delete all image files in play list, but system will remind you " Delete All " before practical operation, if you select Yes, all file will be deleted and Play list window will be closed.
  - Press OK button to play file
- [Green] key:**  
All the Image files in current directory are added into Image play list by Green key, and will display  
- ♡ "behind the Image files, like below.

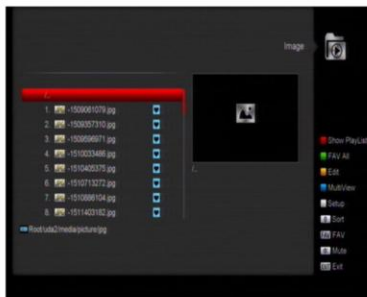

- [Yellow] key:**  
To edit the files or folders in the USB storage . Include rename, copy, delete and create folder function. You can press [Exit] key to previous menu.
- [Blue] key**

To preview the images, press this key you can see the picture like below.



## 12.4 PVR Setting



- Time Shift:**  
**ON:** Enable the Time Shift function.  
**OFF:** Disable the Time Shift function.
- Timeshift to Record**  
**ON:** Means when you press the " ● " Button to record the program, it will merging the Timeshift files and the record files.  
**OFF:** Means when you record the program, it just start when you press " ● " button, not include the Timeshift files.
- Record as Scrambled**
- Record Type**  
You can select the record type by press [left/right] key.
- Jump Step**  
You can select the jump time by press [left/right] key.
- Record Path**  
You can select the record path by press[left/right] key.
- Timeshift Path**  
You can select the timeshift path by press[left/right] key.

## 12.5 Disk Manage

In this menu you can select USB disk for HDD Format,HDD information and USB Speed test.



### HDD Format



Press "Green" button to enter the HDD Format menu like the below picture.If you want to format the HDD then select the File System between the "FAT" and the "NTFS", Press "OK" Button to confirm.

### HDD Information



Press "Yellow" button to enter the HDD Information menu like the below picture, you can see details information about the HDD


## USB Speed Test




Press "Blue" button to enter the USB Speed Test menu like the below picture, you can see the Standard speed and your USB harddisk speed, according this information you can know what operation your disk can support .In this menu,and you can press "Red" button refurbish the USB disk speed.

## 12.6 Remove USB Device safely!

Use this menu you can remove the USB Device safely.

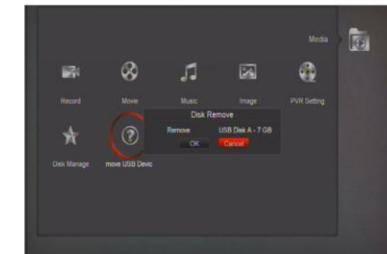

## 13. Game

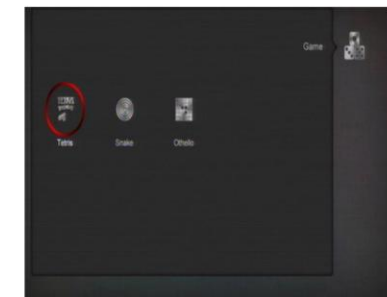

When you enter "Game" menu, you will see three Games include Tetris, Snake and Othello.

**Basic operation statement:**

**13.1 Tetris**

- a) Moving highlight to "Setup" and press [Left/Right] key to select the game level (speed).
- b) Moving highlight to "Start" and press [OK] key to start the game.
- c) Moving highlight to [Cancel]keys and press [OK]key to draw back from the game.
- d) Start on the game:
  - [Left/Right] Move shape left or right
  - "Channel Up" Rotate clockwise
  - "Channel Down" Faster drop
  - [OK] Pause/Play the game
  - [Exit] Quit game and draw back to "Game" menu.

**13.2 Snake**


- a) Moving highlight to "Setup" and press [Left/Right] key to select the game level (speed).
- b) Moving highlight to "Start" and press [OK] key to start the game.
- c) Moving highlight to[Cancel]keys and press [OK]key to draw back from the game.
- d) Start on the game:
  - [Left/Right/Channel UP/Channel Down] use these arrow keys to guide the snake.
  - [OK] Pause/Play game
  - [Exit] Quit game and draw back to "Game" menu.

**13.3 Othello**

- a) Moving highlight to "Setup" and press [Left/Right] keys to select the game level (degree of difficulty).
- b) Moving highlight to "Start" and press [OK] key to start the game.
- c) Moving highlight to [Cancel] keys and press [OK] key to draw back from the game.
- d) Start on the game:
  - [Left/Right/Channel UP/Channel Down] use these arrow keys to guide chessman.
  - [OK] set chessman.
  - [Exit] Quit game and draw back to "Game" menu.

**14. EPG**


Press 'OK' button to this menu you can see the picture like the below. you can select EPG more and Schedule. This Function is same as EPG.

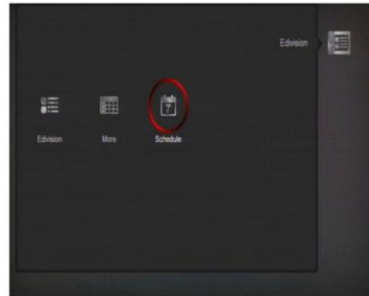

**15. New Features**

**15.1 Equalizer**

When you listen the Radio program, it will display the music spectrum graphic on TV Screen.

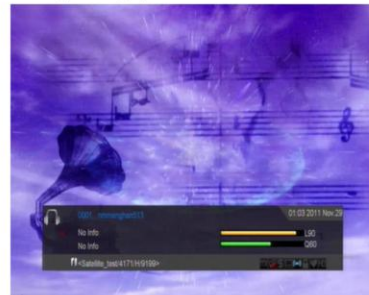

**16. Trouble Shooting**

If you suspect there is a fault with your receiver, please check the following trouble shooting guide before calling authorized service agent.

Warning! Under no circumstances attempt to repair the receiver yourself. Tampering with the receiver may result in fatal electric shock and will invalidate your warranty.

Symptom	Possible cause
Settings you made in the menu have not change	The receiver lost power before being able to enter into standby mode Some of the Settings saved by user can be deleted partly or fully
No signal	The level of signal is weak LNB is out of order The cable from the LNB is incorrectly Connected (short circuit or open circuit) The position of dish is aligned incorrectly
Receiver is on but no picture or sound except the following messages (NO TV program)	Channel is not available Channel is scramble
Receiver not responding to remote control unit	RCU batteries are dead or inserted incorrectly The RCU is pointing toward wrong direction
Poor picture Quality	The level of Signal strength is low
No sound	The cable is connected incorrectly The Volume level is low Muting function is active
No display on the LED Display Panel	The power cord is not plugged in correctly.
No picture on the screen	Receiver is in Standby mode RCA Jack or cable is not connected firmly to the video output port of television Incorrect channel or video output is selected on television Brightness level of your TV set is incorrectly defined

## 17. Specifications

SYSTEM RESOURCES	
<b>Main Processor</b>	594MHz based CPU
<b>Flash Memory</b>	64 Mbits
<b>DDR SDRAM</b>	1024 Mbits
Tuner/Front-end(Optional)	
<b>Tuner Type</b>	DVB-S / DVB-S2
<b>Input Connector</b>	F-type, Connector, Female
<b>Signal Level</b>	-65 to -25 dBm
<b>LNB Power &amp; Polarization</b>	Vertical: +13V Horizontal: +18V Current: Max. 400mA Overload Protection
<b>22KHz Tone</b>	Frequency: 22±1KHz
<b>DiSEqC Control</b>	Amplitude: 0.6±0.2V Version 1.0, 1.1 1.2, USALS Available, unicable
<b>Demodulation</b>	QPSK, 8PSK
<b>Input Symbol Rate</b>	1-45 Mbps, Convolution Code Rate
<b>Forward Error Correction (FEC)</b>	DVB-S 1/2, 2/3, 3/4 5/6, 7/8 DVB-S2 1/2, 3/5 , 2/3, 3/4, 4/5 , 5/6, 8/9 , 9/10
POWER SUPPLY	
<b>Input Voltage</b>	Free Voltage (100~240V AC, 50/60Hz)
<b>Power Consumption</b>	15W MAX
MPEG TS A/V Decoding	
<b>Transport Stream</b>	MPEG-2, H.264
<b>Input Rate</b>	Max.120Mbit/s
<b>Aspect Ratio</b>	4:3, 16:9, Letter Box
<b>Video Decoding</b>	MPEG-2, MP@ML, MPEG-4 part 10/H264
<b>Video Resolution</b>	720*480P/I, 720*576P/I, 1280*720p,1920*1080i, 1920*1080P
<b>Audio Decoding</b>	MEPG-1 layer I/II, Mpeg2 layerI
<b>Audio Mode</b>	Left / Right / Stereo/ Mono
<b>Sampling Rate</b>	32, 44.1 and 48KHz
A/V & DATA INPUT/OUTPUT	
<b>AV OUT</b>	Video CVBS output Audio L/R output
<b>S/PDIF</b>	Coaxial, Digital Audio

<b>RS-232C</b>	Transfer rate 115.2Kbps 9 pin D-sub Type
<b>USB</b>	Two USB 2.0 slot Compatible
<b>HDMI</b>	VER1.3 Type A
PHYSICAL SPECIFICATION	
<b>Size[B*H*T]</b>	260mmX54mmX188mm
<b>Net Weight</b>	1.6~2KG
<b>Operation Temperature</b>	0℃ ~+45℃
<b>Storage Temperature</b>	-10℃ ~+70℃
<b>Storage Humidity</b>	5%~95% RH (Non-Condensing)

Specifications are subject to change without further notice.  
The manufacturer does not assume any responsibility regarding any errors or mistakes in printing.  
Please note that a new software may change the features of the receiver.  
The manufacturer holds the rights of changes without any further notice.  
The image shown here is indicative only, The actual product may differ.